

# Modbus connection

# C5


C5 controller supports Modbus RTU and Modbus TCP/IP protocols

**Modbus RTU** protocol works via RS485 interface, connection is provided to terminals 1,2,3 of the C5 controller (Pic. 1). Default interface settings and ID are as follows:


Baudrate	19200
Word length	8
Parity	EVEN
Stop bits	1
Modbus ID	1

These settings can be changed using laptop connected to webserver (Pic. 2). To connect devices use twisted pair cable. Maximum cable length is 150m. Connect GND cables together, if distance between the RS485 interfaces is more than 10m.

**Modbus TCP** protocol uses Ethernet interface, connection is provided to RJ-45 socket (Pic.1) on the C5 controller (CAT5 cable is recommended). The maximum cable length between device and C5 controller board must not exceed 100m. Default IP address is 192.168.0.50, port 502. The IP address can be changed using laptop connected to webserver (Pic. 2) or control panel (Pic. 3).

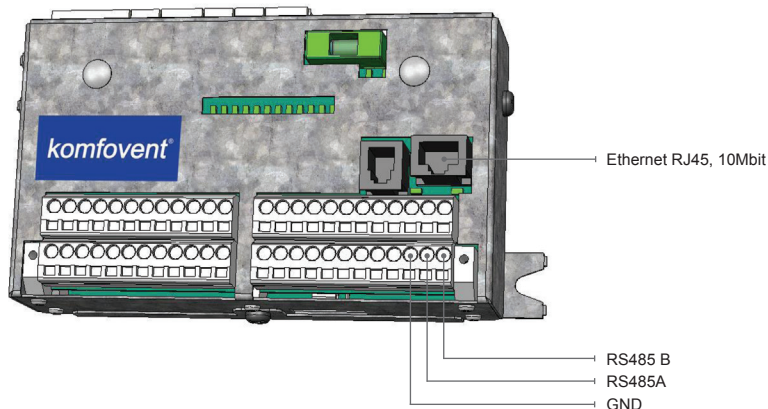

Picture 1. C5 controller board

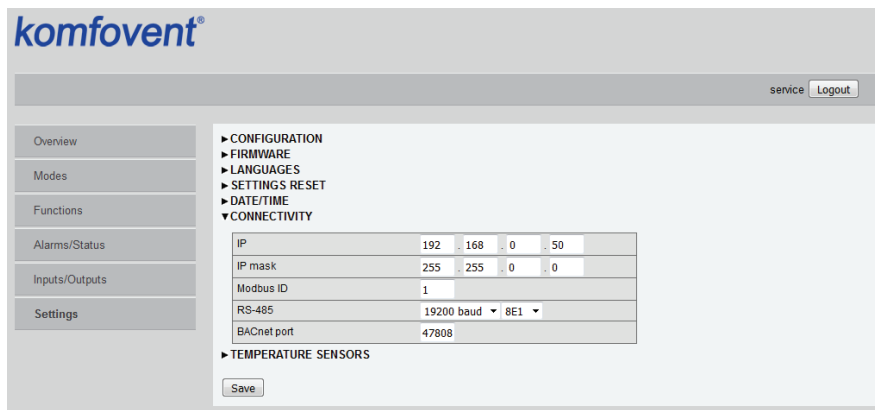

Picture 2. Connectivity settings

Following tables lists available Modbus registers

MODES						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
1	int	R/W	0-1	0	AHU On/Off control	0-Off, 1-On
100	int	R/W	1-6	1	Operation mode selection	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
101-102	int32	R/W	-	-	Comfort1: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
103-104	int32	R/W	-	-	Comfort1: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
105	int	R/W	50-400	210	Comfort1: Setpoint temperature	200 => 20,0C
106-107	int32	R/W	-	-	Comfort2: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
108-109	int32	R/W	-	-	Comfort2: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
110	int	R/W	50-400	210	Comfort2: Setpoint temperature	200 => 20,0C
111-112	int32	R/W	-	-	Economy1: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
113-114	int32	R/W	-	-	Economy1: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
115	int	R/W	50-400	200	Economy1: Setpoint temperature	200 => 20,0C
116-117	int32	R/W	-	-	Economy2: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
118-119	int32	R/W	-	-	Economy2: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
120	int	R/W	50-400	190	Economy2: Setpoint temperature	200 => 20,0C
121-122	int32	R/W	-	-	Special: Supply flow	Auto-correction to be within allowed range (20-100% of maximum supply flow or 0)
123-124	int32	R/W	-	-	Special: Extract flow	Auto-correction to be within allowed range (20-100% of maximum extract flow or 0)
125	int	R/W	50-400	210	Special: Setpoint temperature	200 => 20,0C
126	bin	R/W	-	31	Special: Configuration	b4-Dehumidifying, b3-Humidifying, b2-Recirculation, b1-Cooling, b0-Heating (1-Enable, 0-Disable)
127	int	R/W	0-1	0	Flow control mode	0-CAV, 1-VAV, 2 - DCV
128	int	R/W	0-2	0	Temp. control mode	0-Supply, 1-Extract, 2-Room
129	int	R/W	0-4	0	VAV status/calibration	0-Not calibrated, 1-Calibrating, 2-Supply, 3-Extract, 4-Double. Write 0x99C5 to start VAV calibration
130	int	R/W	100-5000	500	VAV sensors range	500 => 500Pa
131	int	R/W	0-4500	0	Nominal supply pressure	Auto-correction to be within allowed range (0-90% of VAV sensors range)
132	int	R/W	0-4500	0	Nominal exhaust pressure	Auto-correction to be within allowed range (0-90% of VAV sensors range)

OPERATION PROGRAM						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
200	bin	R/W	-	0	Event01: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
201	int8x2	R/W	0:00-23:59	0:00	Event01: Start time	0x0805 => 8:05
202	int8x2	R/W	0:00-24:00	0:00	Event01: Stop time	0x0805 => 8:05
203	int	R/W	0-5	0	Event01: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
204	bin	R/W	-	0	Event02: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
205	int8x2	R/W	0:00-23:59	0:00	Event02: Start time	0x0805 => 8:05
206	int8x2	R/W	0:00-24:00	0:00	Event02: Stop time	0x0805 => 8:05
207	int	R/W	0-5	0	Event02: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
208	bin	R/W	-	0	Event03: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
209	int8x2	R/W	0:00-23:59	0:00	Event03: Start time	0x0805 => 8:05
210	int8x2	R/W	0:00-24:00	0:00	Event03: Stop time	0x0805 => 8:05
211	int	R/W	0-5	0	Event03: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
212	bin	R/W	-	0	Event04: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
213	int8x2	R/W	0:00-23:59	0:00	Event04: Start time	0x0805 => 8:05
214	int8x2	R/W	0:00-24:00	0:00	Event04: Stop time	0x0805 => 8:05
215	int	R/W	0-5	0	Event04: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
216	bin	R/W	-	0	Event05: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
217	int8x2	R/W	0:00-23:59	0:00	Event05: Start time	0x0805 => 8:05
218	int8x2	R/W	0:00-24:00	0:00	Event05: Stop time	0x0805 => 8:05
219	int	R/W	0-5	0	Event05: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
220	bin	R/W	-	0	Event06: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
221	int8x2	R/W	0:00-23:59	0:00	Event06: Start time	0x0805 => 8:05
222	int8x2	R/W	0:00-24:00	0:00	Event06: Stop time	0x0805 => 8:05
223	int	R/W	0-5	0	Event06: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
224	bin	R/W	-	0	Event07: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
225	int8x2	R/W	0:00-23:59	0:00	Event07: Start time	0x0805 => 8:05
226	int8x2	R/W	0:00-24:00	0:00	Event07: Stop time	0x0805 => 8:05

OPERATION PROGRAM						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
227	int	R/W	0-5	0	Event07: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
228	bin	R/W	-	0	Event08: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
229	int8x2	R/W	0:00-23:59	0:00	Event08: Start time	0x0805 => 8:05
230	int8x2	R/W	0:00-24:00	0:00	Event08: Stop time	0x0805 => 8:05
231	int	R/W	0-5	0	Event08: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
232	bin	R/W	-	0	Event09: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
233	int8x2	R/W	0:00-23:59	0:00	Event09: Start time	0x0805 => 8:05
234	int8x2	R/W	0:00-24:00	0:00	Event09: Stop time	0x0805 => 8:05
235	int	R/W	0-5	0	Event09: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
236	bin	R/W	-	0	Event10: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
237	int8x2	R/W	0:00-23:59	0:00	Event10: Start time	0x0805 => 8:05
238	int8x2	R/W	0:00-24:00	0:00	Event10: Stop time	0x0805 => 8:05
239	int	R/W	0-5	0	Event10: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
240	bin	R/W	-	0	Event11: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
241	int8x2	R/W	0:00-23:59	0:00	Event11: Start time	0x0805 => 8:05
242	int8x2	R/W	0:00-24:00	0:00	Event11: Stop time	0x0805 => 8:05
243	int	R/W	0-5	0	Event11: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
244	bin	R/W	-	0	Event12: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
245	int8x2	R/W	0:00-23:59	0:00	Event12: Start time	0x0805 => 8:05
246	int8x2	R/W	0:00-24:00	0:00	Event12: Stop time	0x0805 => 8:05
247	int	R/W	0-5	0	Event12: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
248	bin	R/W	-	0	Event13: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
249	int8x2	R/W	0:00-23:59	0:00	Event13: Start time	0x0805 => 8:05
250	int8x2	R/W	0:00-24:00	0:00	Event13: Stop time	0x0805 => 8:05
251	int	R/W	0-5	0	Event13: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
252	bin	R/W	-	0	Event14: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
253	int8x2	R/W	0:00-23:59	0:00	Event14: Start time	0x0805 => 8:05

OPERATION PROGRAM						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
254	int8x2	R/W	0:00-24:00	0:00	Event14: Stop time	0x0805 => 8:05
255	int	R/W	0-5	0	Event14: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
256	bin	R/W	-	0	Event15: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
257	int8x2	R/W	0:00-23:59	0:00	Event15: Start time	0x0805 => 8:05
258	int8x2	R/W	0:00-24:00	0:00	Event15: Stop time	0x0805 => 8:05
259	int	R/W	0-5	0	Event15: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
260	bin	R/W	-	0	Event16: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
261	int8x2	R/W	0:00-23:59	0:00	Event16: Start time	0x0805 => 8:05
262	int8x2	R/W	0:00-24:00	0:00	Event16: Stop time	0x0805 => 8:05
263	int	R/W	0-5	0	Event16: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
264	bin	R/W	-	0	Event17: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
265	int8x2	R/W	0:00-23:59	0:00	Event17: Start time	0x0805 => 8:05
266	int8x2	R/W	0:00-24:00	0:00	Event17: Stop time	0x0805 => 8:05
267	int	R/W	0-5	0	Event17: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
268	bin	R/W	-	0	Event18: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
269	int8x2	R/W	0:00-23:59	0:00	Event18: Start time	0x0805 => 8:05
270	int8x2	R/W	0:00-24:00	0:00	Event18: Stop time	0x0805 => 8:05
271	int	R/W	0-5	0	Event18: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
272	bin	R/W	-	0	Event19: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
273	int8x2	R/W	0:00-23:59	0:00	Event19: Start time	0x0805 => 8:05
274	int8x2	R/W	0:00-24:00	0:00	Event19: Stop time	0x0805 => 8:05
275	int	R/W	0-5	0	Event19: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
276	bin	R/W	-	0	Event20: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
277	int8x2	R/W	0:00-23:59	0:00	Event20: Start time	0x0805 => 8:05
278	int8x2	R/W	0:00-24:00	0:00	Event20: Stop time	0x0805 => 8:05
279	int	R/W	0-5	0	Event20: Mode	0-Standby,1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special

HOLLYDAY SCHEDULE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
300	int	R/W	2010-2250		Event01: Start year	
301	int8x2	R/W	01.01-12.31		Event01: Start date	0x020C => Feb12
302	int	R/W	2010-2250		Event01: Stop year	
303	int8x2	R/W	01.01-12.31		Event01: Stop date	0x020C => Feb12
304	int	R/W	0-6		Event01: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
305	int	R/W	2010-2250		Event02: Start year	
306	int8x2	R/W	01.01-12.31		Event02: Start date	0x020C => Feb12
307	int	R/W	2010-2250		Event02: Stop year	
308	int8x2	R/W	01.01-12.31		Event02: Stop date	0x020C => Feb12
309	int	R/W	0-6		Event02: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
310	int	R/W	2010-2250		Event03: Start year	
311	int8x2	R/W	01.01-12.31		Event03: Start date	0x020C => Feb12
312	int	R/W	2010-2250		Event03: Stop year	
313	int8x2	R/W	01.01-12.31		Event03: Stop date	0x020C => Feb12
314	int	R/W	0-6		Event03: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
315	int	R/W	2010-2250		Event04: Start year	
316	int8x2	R/W	01.01-12.31		Event04: Start date	0x020C => Feb12
317	int	R/W	2010-2250		Event04: Stop year	
318	int8x2	R/W	01.01-12.31		Event04: Stop date	0x020C => Feb12
319	int	R/W	0-6		Event04: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
320	int	R/W	2010-2250		Event05: Start year	
321	int8x2	R/W	01.01-12.31		Event05: Start date	0x020C => Feb12
322	int	R/W	2010-2250		Event05: Stop year	
323	int8x2	R/W	01.01-12.31		Event05: Stop date	0x020C => Feb12
324	int	R/W	0-6		Event05: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
325	int	R/W	2010-2250		Event06: Start year	
326	int8x2	R/W	01.01-12.31		Event06: Start date	0x020C => Feb12

HOLLYDAY SCHEDULE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
327	int	R/W	2010-2250		Event06: Stop year	
328	int8x2	R/W	01.01-12.31		Event06: Stop date	0x020C => Feb12
329	int	R/W	0-6		Event06: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
330	int	R/W	2010-2250		Event07: Start year	
331	int8x2	R/W	01.01-12.31		Event07: Start date	0x020C => Feb12
332	int	R/W	2010-2250		Event07: Stop year	
333	int8x2	R/W	01.01-12.31		Event07: Stop date	0x020C => Feb12
334	int	R/W	0-6		Event07: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
335	int	R/W	2010-2250		Event08: Start year	
336	int8x2	R/W	01.01-12.31		Event08: Start date	0x020C => Feb12
337	int	R/W	2010-2250		Event08: Stop year	
338	int8x2	R/W	01.01-12.31		Event08: Stop date	0x020C => Feb12
339	int	R/W	0-6		Event08: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
340	int	R/W	2010-2250		Event09: Start year	
341	int8x2	R/W	01.01-12.31		Event09: Start date	0x020C => Feb12
342	int	R/W	2010-2250		Event09: Stop year	
343	int8x2	R/W	01.01-12.31		Event09: Stop date	0x020C => Feb12
344	int	R/W	0-6		Event09: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
345	int	R/W	2010-2250		Event10: Start year	
346	int8x2	R/W	01.01-12.31		Event10: Start date	0x020C => Feb12
347	int	R/W	2010-2250		Event10: Stop year	
348	int8x2	R/W	01.01-12.31		Event10: Stop date	0x020C => Feb12
349	int	R/W	0-6		Event10: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program

RECIRCULATION SCHEDULE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
400	bin	R/W	-	0	Event01: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
401	int8x2	R/W	0:00-23:59	0:00	Event01: Start time	0x0805 => 8:05



RECIRCULATION SCHEDULE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
402	int8x2	R/W	0:00-24:00	0:00	Event01: Stop time	0x0805 => 8:05
403	int	R/W	0..100	0	Event01: Level	
404	bin	R/W	-	0	Event02: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
405	int8x2	R/W	0:00-23:59	0:00	Event02: Start time	0x0805 => 8:05
406	int8x2	R/W	0:00-24:00	0:00	Event02: Stop time	0x0805 => 8:05
407	int	R/W	0..100	0	Event02: Level	
408	bin	R/W	-	0	Event03: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
409	int8x2	R/W	0:00-23:59	0:00	Event03: Start time	0x0805 => 8:05
410	int8x2	R/W	0:00-24:00	0:00	Event03: Stop time	0x0805 => 8:05
411	int	R/W	0..100	0	Event03: Level	
412	bin	R/W	-	0	Event04: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
413	int8x2	R/W	0:00-23:59	0:00	Event04: Start time	0x0805 => 8:05
414	int8x2	R/W	0:00-24:00	0:00	Event04: Stop time	0x0805 => 8:05
415	int	R/W	0..100	0	Event04: Level	
416	bin	R/W	-	0	Event05: Days	b6-Sun, b5-Sat, b4-Fri, b3-Thu, b2-Wed, b1-Tue, b0-Mon (1-Select, 0-Deselect)
417	int8x2	R/W	0:00-23:59	0:00	Event05: Start time	0x0805 => 8:05
418	int8x2	R/W	0:00-24:00	0:00	Event05: Stop time	0x0805 => 8:05
419	int	R/W	0..100	0	Event05: Level	

SETTINGS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
450	int8x2	R/W	0:00-23:59	0:00	Time	0x0805 => 8:05
451	int	R/W	0-59	0	Seconds	
452	int	R	1-7	7	Day of week	1-Mon, 2-Tue, 3-Wed, 4-Thu, 5-Fri, 6-Sat, 7-Sun
453	int8x2	R/W	01.01-12.31	01.01	Date	0x020C => Feb12
454	int	R/W	2010-2250	2012	Year	
455	int	R/W	0-3	0	Language	0-English, 1-Lithuanian, 2-Russian, 3-Polish
456	int	R/W	1-247	1	Modbus address	

SETTINGS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
457-458	int32	R/W		192.168.0.50	IP address	
459	int	R/W	0-3	0	Flow units	0-m <sup>3</sup> /h, 1-l/s, 2-m <sup>3</sup> /s, 3-Pa
460-467	int8x2	R	-		AHU S/N	
468-479	int8x2	R			AHU name	
480-481	int8x2	R/W			IP mask	With auto correction
482	int	R/W	-	19200 8E1	RS-485	Speed (b4..b3): 0 – 9600, 1 – 19200, 2 – 38400, 3 – 57600; parity (b1): 0 – none, 1 – even; stop bits (b0): 0 – 1, 1 – 2

FUNCTIONS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
501	int	R/W	200..1800	1000	Air quality control: Setpoint 1	200..1800ppm, 10..90%, 10..90%RH, 5..45C
502	int	R/W	1..5	1	Air quality control: Mode 1	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
503	int	R/W	200..1800	1000	Air quality control: Setpoint 2	200..1800ppm, 10..90%, 10..90%RH, 5..45C
504	int	R/W	1..5	1	Air quality control: Mode 1	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
505	int	R/W	0..1	0	Outdoor comp. ventilation: Enable/Disable	0-Disable, 1-Enable
506	int	R/W	-400..500	-400	Outdoor comp. ventilation: Winter comp. stop	-150 => -15.0C
507	int	R/W	-400..500	0	Outdoor comp. ventilation: Winter comp. start	-150 => -15.0C
508	int	R/W	-400..500	200	Outdoor comp. ventilation: Summer comp. start	250 => 25.0C
509	int	R/W	-400..500	500	Outdoor comp. ventilation: Summer comp. stop	250 => 25.0C
510	int	R/W	0..1	0	Min. temperature control: Enable/Disable	0-Disable, 1-Enable
511	int	R/W	-400..500	150	Min. temperature control: Setpoint	-150 => -15.0C
512	int	R/W	0..1	1	Override function: Enable/Disable	0-Disable, 1-Enable
513	int	R/W	0..2	0	Override function: Override type	0-All time, 1-If on, 2-If off
514	int	R/W	0..6	2	Override function: Mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special, 6-Program
515	int	R/W	0..1	0	Summer night cooling: Enable/Disable	0-Disable, 1-Enable
516	int	R/W	100..500	250	Summer night cooling: Start temperature	250 => 25.0C
517	int	R/W	0..1	0	Operation on demand: Enable/Disable	0-Disable, 1-Enable
518	int	R/W	200..1800	150	Operation on demand: Setpoint	200..1800ppm, 10..90%, 10..90%RH, 5..45C

FUNCTIONS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
519	int	R/W	0..1	0	Recirculation control: Enable/Disable	0-Disable, 1-Enable
520	int	R/W	200..1800	600	Recirculation control: Setpoint	200..1800ppm, 10..90%, 10..90%RH, 5..45C
521	int	R/W	0..80	30	Recirculation control: Min. fresh air	
522	int	R/W	-400..500	-400	Recirculation control: Winter recirculation end	-150 => -15.0C
523	int	R/W	-400..500	0	Recirculation control: Winter recirculation start	-150 => -15.0C
524	int	R/W	-400..500	200	Recirculation control: Summer recirculation start	250 => 25.0C
525	int	R/W	-400..500	500	Recirculation control: Summer recirculation end	250 => 25.0C
526	int	R/W	0..100	0	Recirculation control: Default recirculation	
527	int	R/W	0..100	60	Recirculation control: Activated recirculation	
528	int	R/W	0..1	0	Humidity control: Enable/Disable	0-Disable, 1-Enable
529	int	R/W	10..90	1000	Humidity control: Setpoint 1	10..90%RH
530	int	R/W	1..5	1	Humidity control: Mode 1	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
531	int	R/W	10..90	1000	Humidity control: Setpoint 2	10..90%RH
532	int	R/W	1..5	2	Humidity control: Mode 2	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
533	int	R/W	1..5	1	Recirculation control: Mode 1	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
534	int	R/W	200..1800	900	Recirculation control: Setpoint 2	200..1800ppm, 10..90%, 10..90%RH, 5..45C
535	int	R/W	1..5	2	Recirculation control: Mode 2	1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
536	int	R/W	0..100	20	Recirculation control: Min. fresh air 2	
537	int	R/W	150..500	200	Summer night cooling: Stop temperature	200 => 20.0C
538	bin	R/W	0..1	0	Inspection lighting: Enable/Disable	
539	bin	R/W	0..1	0	Additional zone 1: Enable/Disable	
540	int	R/W	-400..400	210	Additional zone 1: Setpoint	200 => 20,0C
541	bin	R/W	0..1	0	Additional zone 2: Enable/Disable	
542	int	R/W	-400..400	210	Additional zone 2: Setpoint	200 => 20,0C
543	int	R/W	-500..1200	-32768	External room temperature sensor	200 => 20.0C. Overrides extract flow temperature sensor for temperature control only when written value is in range
544	int	R/W	-1..2	0	Digital input IN4 override	Overrides digital input IN4 for combined heating & cooling coil control. (-1 – function not available or disabled, 0 – heating (winter mode), 1 – cooling (summer mode), 2 – error)

FUNCTIONS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
545	int	R/W	0..4	0	Air quality sensor type	0 – CO2, 1 – VOCq, 2 – VOCp, 3 – RH, 4 – temperature

ALARMS						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
1000	int	R/W	0..10	-	Active alarms count	Writing 0x99C5 - Active alarms reset and restore previous mode
1001	hex	R		-	Active alarm 1 code (newest)	
1002	hex	R		-	Active alarm 2 code	
1003	hex	R		-	Active alarm 3 code	
1004	hex	R		-	Active alarm 4 code	
1005	hex	R		-	Active alarm 5 code	
1006	hex	R		-	Active alarm 6 code	
1007	hex	R		-	Active alarm 7 code	
1008	hex	R		-	Active alarm 8 code	
1009	hex	R		-	Active alarm 9 code	
1010	hex	R		-	Active alarm 10 code	
1100	int	R	0..50	-	Alarm history count	
1101	int	R	2010..2250	-	Alarm1(newest) year	
1102	int8x2	R	01.01-12.31	-	Alarm1(newest) month-day	0x020C => Feb12
1103	int8x2	R	0:00-23:59	-	Alarm1(newest) time	0x0805 => 8:05
1104	int	R	0..59	-	Alarm1(newest) seconds	
1105	hex	R		-	Alarm1(newest) code	4B => 0x0104
.....	.....	.....	.....	.....	.....	.....
1346	int	R	2010..2250	-	Alarm50 year	
1347	int8x2	R	01.01-12.31	-	Alarm50 month-day	0x020C => Feb12
1348	int8x2	R	0:00-23:59	-	Alarm50 time	0x0805 => 8:05
1349	int	R	0..59	-	Alarm50 seconds	
1350	hex	R		-	Alarm50 code	4B => 0x0104

MONITORING DATA						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2000	int	R	0-2	-	C5 Start/Stop current status	0-Stop, 1-Enabled but fans are stopped, 2-Running
2001	int	R	0-5	-	Current mode	0-Standby, 1-Comfort1, 2-Comfort2, 3-Economy1, 4-Economy2, 5-Special
2002-2003	int	R	-	-	Current supply flow	3500 => 3500 m3/h, 3.500 m3/s, 3500 l/s
2004-2005	int	R	-	-	Current exhaust flow	3500 => 3500 m3/h, 3.500 m3/s, 3500 l/s
2006	int	R	-500..1200	-	Current supply temp., C	250 => 25.0C
2007	int	R	-500..1200	-	Current extract temp., C	250 => 25.0C
2008	int	R	-500..1200	-	Current outdoor temp., C	250 => 25.0C
2009	int	R	-500..1200	-	Current exhaust temp., C	250 => 25.0C
2010	int	R	-500..1200	-	Current return water temp., C	250 => 25.0C
2011	int	R	0..1000	-	Supply air pressure	
2012	int	R	0..1000	-	Extract air pressure	
2013	int	R	0..4	-	Air quality sensor type	0-CO2, 1-VOCq, 2-VOCp, 3-RH, 4-TMP
2014	int	R	0..2000	-	Current air quality level	CO2: 0..2000ppm, VOC: 0..1000(0..100%), RH: 0..1000(0..100%), TMP: 0..500(0..50C)
2015	int	R	0..1000	-	Current supply air humidity	157 => 15.7%
2016	int	R	0..1000	-	Water heater level	
2017	int	R	0..1000	-	Water cooler level	
2018	int	R	0..1000	-	Humidity control level	
2019	int	R	0..1000	-	Heat exchanger level	
2020	int	R	0..1000	-	Recirculation level	
2021	int	R	0..1000	-	Supply fan level	
2022	int	R	0..1000	-	Exhaust fan level	
2023	int	R	0..1000	-	Outdoor air damper actuator level	
2024	int	R	0..1000	-	Exhaust air damper actuator level	
2025	int	R	0..1000	-	Electric heater level	
2026	int	R	-1000..1000	-	Heat pump level	
2027	int	R	-1000..1000	-	DX level	
2028	bin	R	0..1	-	OVR input	

MONITORING DATA						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2029	bin	R	0..1	-	Fire system input	
2030	bin	R	0..1	-	External stop input	
2031	bin	R	0..1	-	Control input	
2032	int	R	50..400	-	Current temp. setpoint, C	250 => 25.0C
2033	int	R	50..400	-	Current supply air temp. setpoint, C	250 => 25.0C
2034	bin	R	0..1	-	Water heater pump	
2035	bin	R	0..1	-	Water cooler pump	
2036-2037	int	R	-	-	Current supply flow setpoint	3500 => 3500 m3/h, 3.500 m3/s, 3500 l/s
2038-2039	int	R	-	-	Current extract flow setpoint	3500 => 3500 m3/h, 3.500 m3/s, 3500 l/s
2040	int	R	-500..1200	-	Current internal supply temp., C	250 => 25.0C
2041	int	R	-500..1200	-	Additional zone 1: current supply temp., C	250 => 25.0C
2042	int	R	-500..1200	-	Additional zone 1: current return water temp., C	250 => 25.0C
2043	int	R	-500..1200	-	Additional zone 2: current supply temp., C	250 => 25.0C
2044	int	R	-500..1200	-	Additional zone 2: current return water temp., C	250 => 25.0C
2200	bin	R		-	Counters/efficiencies configuration	b8-Exhaust fan units(0-h, 1-kWh), b7-Supply fan units(0-h, 1-kWh), b6-Exhaust fan counter, b5-Heater counter, b4-Extract filter, b3-Outdoor filter, b2-Exhaust SFP, b1-Supply SFP, b0-HX efficiency (0-Unavailable, 1-Available)
2201	int	R	0..100, 255	-	Heat exchanger thermal efficiency, %	255 - Unavailable
2202	int	R	0..100, 255	-	Energy saving, %	255 - Unavailable
2203-2204	int	R		-	Heat exchanger recovery, W	2500 => 2.5kW (0xFFFFFFFF - Unavailable)
2205	int	R		-	Supply SFP	125 => 1.25
2206	int	R		-	Exhaust SFP	125 => 1.25
2207	int	R	0..100	-	Outdoor air filter impurity level, %	
2208	int	R	0..100	-	Exhaust air filter impurity level, %	
2209-2210	int	R	0..1'000'000	-	Air heater operation, hours	
2211-2212	int	R	0..50'000'000	-	Supply fan operation, hours or kWh	
2213-2214	int	R	0..50'000'000	-	Exhaust fan operation, hours or kWh	
2215	int	R	0..65535	-	Current supply fan power, W	

MONITORING DATA						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
2216	int	R	0..65535	-	Current exhaust fan power, W	
2217	bin	R		-	Active functions	b5-OOD,b4-AQC,b3-SNC,b2-MTC,b1-OVR,b0-OCV
2218-2219	int	R	0..1'000'000	-	Air cooler operation, hours	
2220-2221	int	R	0..4'000'000	-	Heat exchanger operation, kWh	
2222-2223	int	R	0..4'000'000	-	Air heater operation, kWh	

SERVICE						
Modbus register	Data				Description	Data values
	Type	Access	Range	Default		
900	bin	R/W		0	Modes reset to default	b4-Special, b3-Economy2, b2-Economy1, b1-Comfort2, b0-Comfort1
901	bin	R/W		0	Functions reset to default	b9-ZN2, b8-ZN1, b7-HUM, b6-REC, b5-OOD, b4-SNC, b3-OVR, b2-MTC, b1-OCV, b0-AQC
902	bin	R/W		0	Settings reset to default	b3-485_Config, b2-IP+Mask, b1-Flow_mode, b0-Temp_mode
18000	int	R/W	0	-	User password reset	Write 0x99C5 to reset
18001	int	R/W	0	-	User settings reset	Write 0x99C5 to reset
18002	int	R/W	0	-	Clean air filters calibration	Write 0x99C5 to start calibration
18003	int	R/W	0	-	Counters reset	Write 0x??C5 to reset, ?? => b2-Exhaust fan, b1-Supply fan, b0-Air heater (1 – Reset). 0X01C5 => Reset air heater counter only, 0x07C5 => Reset both fans and air heater counters
18004	int	R	0..9999	-	Controller firmware version	
18005	int	R/W	0..1000	0	Service time counter	0..100.0%, Write 0x99C5 to reset

## UAB KOMFOVENT

**VILNIUS** Ozo g. 10, LT-08200  
Tel. +370 5 277 9701  
Mob. +370 685 44 658  
el. p. info@komfovent.com

**KAUNAS** Taikos pr. 149, LT-52119  
Tel.: +370 37 473 153, +370 37 373 587  
Mob. +370 685 63 962  
el. p. kaunas@komfovent.com

**KLAIPĖDA** Dubysos g. 25, LT-91181  
Mob.: +370 685 93 706, +370 685 93 707  
el. p. klaipeda@komfovent.com

**ŠIAULIAI** Metalistų g. 6H, LT-78107  
Tel. +370 41 500 090  
el. p. siauliai@komfovent.com

**PANEVĖŽYS** Beržų g. 44, LT-36144  
Mob. +370 640 55 988  
el. p. panevezys@komfovent.com

**EXPORT & SALES DEPARTMENT**  
Tel.: +370 5 205 1579, +370 5 231 6574  
Fax +370 5 230 0588  
export@komfovent.com

**GARANTINIO APTARNAVIMO SK. /  
SERVICE AND SUPPORT**  
Tel. +370 5 200 8000  
Mob. +370 652 03 180  
service@komfovent.com

www.komfovent.com

## ООО «АМАЛБА-Р»

Россия, Москва  
ул. Выборгская д. 16,  
стр. 1, 2 этаж, 206 офис  
Тел./факс +7 495 640 6065  
info.msk@komfovent.com  
www.komfovent.ru

## ООО «АМАЛБА-ОКА»

390017 г. Рязань  
Рязжское шоссе, 20 литера Е, пом Н6  
Тел.: +7 4912 950575, +7 4912 950672,  
+7 4912 950648  
info.oka@komfovent.com  
www.komfovent.ru

## ИООО «Комфовент»

Республика Беларусь, 220125 г. Минск,  
ул. Уручская 21 – 423  
Тел. +375 17 266 5297, 266 6327  
info.by@komfovent.com  
www.komfovent.by

## PARTNERS

AT	J. PICHLER Gesellschaft m. b. H.	www.pichlerluft.at
AU	Pacific HVAC	www.pacificvac.com
BE	Ventilair group	www.ventilairgroup.com
	ACB Airconditioning	www.acbairco.be
CZ	REKUVENT s.r.o.	www.rekuvent.cz
CH	WESCO AG	www.wesco.ch
	SUDCLIMATAIR SA	www.sudclimatair.ch
	CLIMAIR GmbH	www.komfovent.com/en/business/ more/contact-us/
DK	UNIQ COMFORT ApS	www.uniqcomfort.dk
	AIR2TRUST	www.air2trust.com
EE	BVT Partners	www.bvtpartners.ee
FR	AERIA	www.aeria-france.fr
GB	ELTA FANS	www.eltafans.com
HR	Microclima	www.microclima.hr
HU	AIRVENT Légtechnikai Zrt.	www.airvent.hu
	Gevent Magyarország Kft.	www.gevent.hu
	Merkapt	www.merkapt.hu
IR	Fantech Ventilation Ltd	www.fantech.ie
IS	Blikk & Tækniþjónustan ehf	www.bogt.is
	Hitataekni ehf	www.hitataekni.is
NL	Ventilair group	www.ventilairgroup.com
	DECIPOL-Vortvent	www.vortvent.nl
NO	Ventistål AS	www.ventistal.no
	Thermo Control AS	www.thermocontrol.no
PL	Ventia Sp. z o.o.	www.ventia.pl
SE	Nordisk Ventilator AB	www.nordiskventilator.se
SI	Agregat d.o.o	www.agregat.si
SK	TZB produkt, s.r.o.	www.tzbprodukt.sk

## Komfovent AB

Ögärdesvägen 12B  
433 30 Partille, Sverige  
Tel. +46 31 487 752  
info\_se@komfovent.com  
www.komfovent.se

## Komfovent Oy

Muuntotie 1 C1  
FI-01 510 VANTAA  
Tel. +358 0 408 263 500  
info\_fi@komfovent.com  
www.komfovent.com

## Komfovent GmbH

Konrad-Zuse-Str. 2a, 42551 Velbert,  
Deutschland  
Tel. +49 0 2051 6051180  
info@komfovent.de  
www.komfovent.de

## Komfovent SIA

Katlakalna iela 9,  
LV-1073 Riga  
Tel. +371 67 20 1572  
Fakss +371 67 20 1570  
info@komfovent.lv  
www.komfovent.lv